



Extreme CCTV™
SURVEILLANCE SYSTEMS

UNIFLOOD 500 – IR LAMPS


INSTALLATION INSTRUCTIONS

Please read these instructions carefully to ensure best performance from your Extreme Lamp.

INSTALLATION

The lamp unit must be connected to the 28 Volt Extreme power supply. The Extreme range of lamps are provided with 4 metres of high-temperature silicone cable and the Power Supply Unit (PSU) is factory-set to ensure optimum performance with this cable length. A longer length lamp cable can be accommodated, please contact Extreme for technical information before proceeding.

The setting up of the lamp is critical in obtaining the best performance from your Extreme lamp. Attach mounting bracket to pan and tilt unit or wall bracket or camera housing. Adjust horizontal target area of lamp. Adjust vertical position of lamp by loosening nuts securing mounting bracket to the main body of the lamp. Tilt lamp downwards until near part of required field of view is saturated with Infra-Red light, as viewed on the monitor.

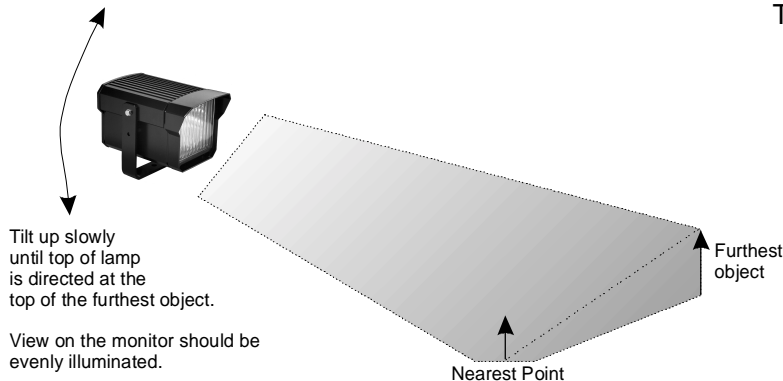

SLOWLY and GRADUALLY tilt the lamp upwards until far part of required field of view is illuminated correctly on the monitor screen. (refer to fig.1)

MAINTENANCE

Extreme Infra-Red flood lamps are optically precise units incorporating high quality precision filters, gold-coated or aluminium reflectors and optimised lenses. Other than the bulb replacement there are no user repairable components within the unit and it is, therefore, sealed for life. Do not, therefore, attempt to dismantle or gain access to the unit other than for bulb replacement.

BULB REPLACEMENT

Standard replacement bulb kits are available from Extreme and are supplied with instructions. For further information contact Extreme at the address below.

SAFETY

WARNING : When the lamp is running it is hot to touch, so switch off and allow to cool for 10 minutes before touching the lamp for maintenance etc. Do not stare directly into the lamp at a distance less than 1.7m.

CONTACT DETAILS

Extreme CCTV Inc
3021 McConnell Drive
Burnaby
British Columbia
Canada
V5A 3A
Toll-Free (N.A.): 1-888-409-2288
International: 1-604-420-7711
Fax: 1-604-420-3300
www.ExtremeCCTV.com